BRT200 Built-in double door fridge/freezer

Instruction manual

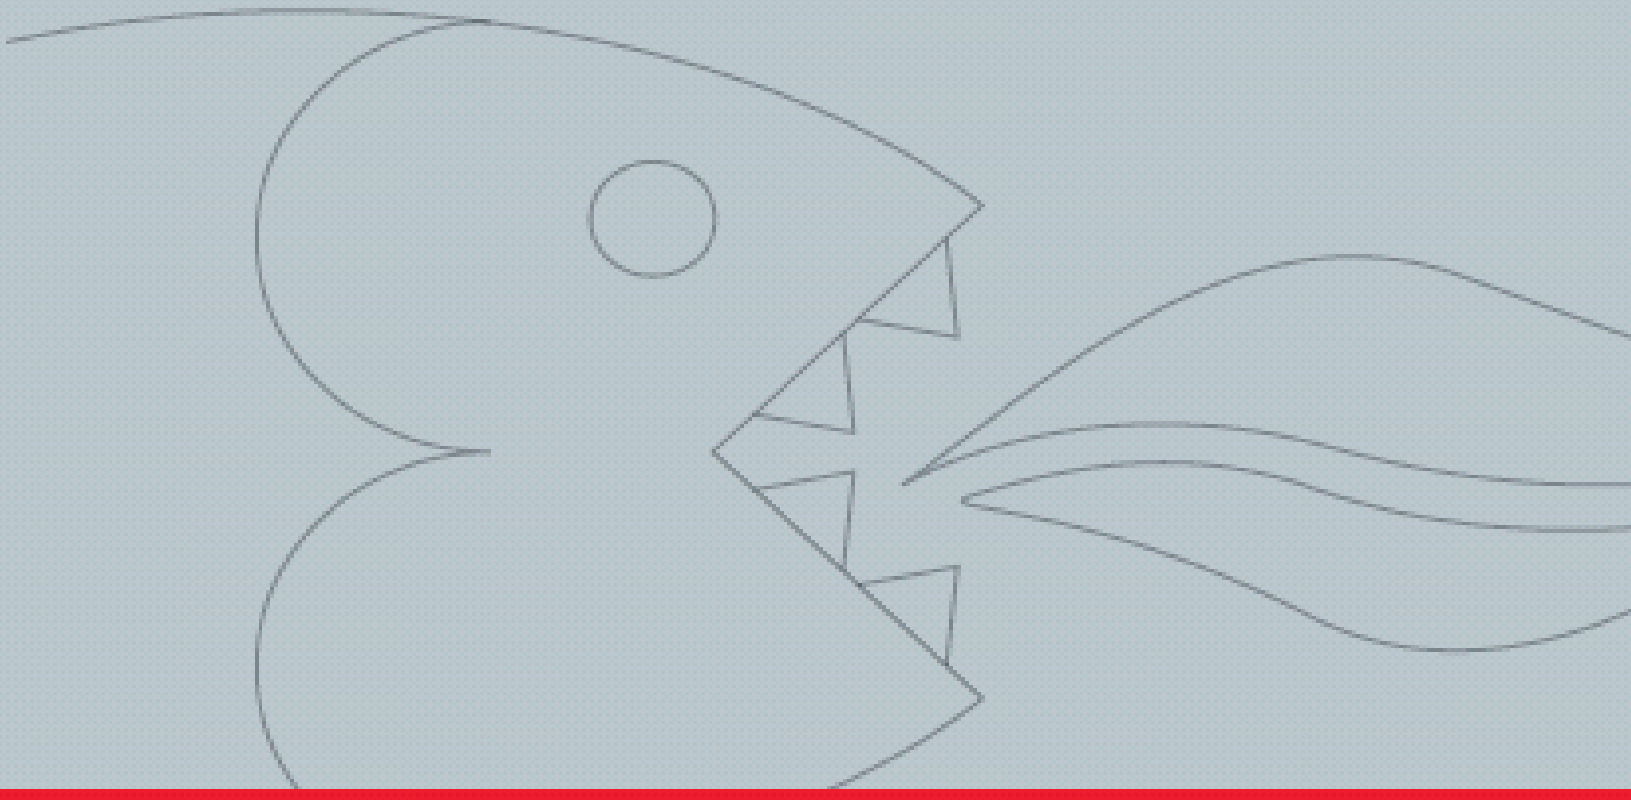

Baumatic®

USER MANUAL FOR YOUR BAUMATIC

BRT200 Built-in double door fridge/freezer

NOTE: ***This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference, for you or any person not familiar with the operation of the appliance.***

DD 22/06/09

Contents

Environmental note	4
Important safety information	5 – 6
Specifications of your BRT200 fridge freezer	7 - 9
Description of the appliance	8
Description of the product features	9
Using your Baumatic fridge freezer	10-11
Before switching on	10
During first use	10
Switching on the appliance and setting the thermostat	11-12
Arranging and storing food in the fridge section	12-13
The ✱✱✱✱ freezer compartment	13-15
Freezing fresh food	14
Tips on freezing	14-15
Making ice cubes	15
Cleaning and maintenance	15-18
The defrost drain hole	16
Defrosting the ✱✱✱✱ freezer compartment	17
Replacing the light bulb	18
Installation	19-27
Electrical connection	19
Positioning	20
Reversing the doors of your appliance	21-23
Aperture dimensions and ventilation requirements	23-24
Installing your fridge freezer	25-27
Troubleshooting	27-29
Contact details	30

Environmental note

Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person. Disable the door lock to make sure that children cannot get stuck inside the appliance.

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol **on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.**

Disposal must be carried out in accordance with local environmental regulations for waste disposal.
For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Important safety information

Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet ***before*** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Advice Line.

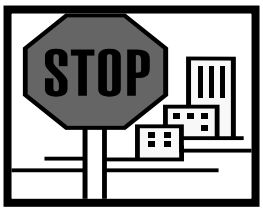

IMPORTANT: Any installation work must be carried out by a qualified electrician or competent person.

Use of the appliance

- Your appliance is only designed to be used in the home. It is suitable for storing food that needs to be chilled and refrigerated. If it is used for any other purpose or it is not used correctly, then Baumatic Ltd. will accept no liability for any damage that may be caused.

- Altering the specification of the appliance must not be attempted for reasons of safety.

Before using your appliance

- Check the appliance for any signs of transport damage. If you notice any damage, then you should not connect your appliance to your mains supply and should contact your retailer.

Refrigerant

- Your appliance contains R600a refrigerant, which is a natural gas that does not contain CFCs that can damage the environment. However it is a flammable substance, therefore care should be taken:
    - During the transportation and installation of the appliance, make sure that the refrigeration pipework does not get damaged.
    - If it does become damaged then sources of ignition and open flames should be avoided. Also the room that the appliance is situated in should be thoroughly ventilated.

- Do not place any objects on top of the appliance, as this may damage the table top.

Child safety

- Packaging material should be kept away from children.
- Children should not be allowed to touch the controls or play with the appliance.

General safety

- Do not pull on the power supply cable to remove the plug from your mains supply socket.

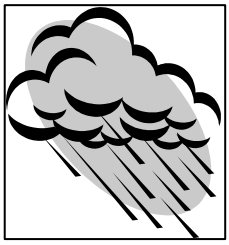

- Do not pull out or insert the plug with wet hands.
- Do not attempt to use your appliance outdoors or any place where it is likely to come into contact with the elements.
- Before cleaning the appliance or performing maintenance work, ensure that the appliance has been disconnected from your mains supply.
- Never allow the back coils of the appliance to come into contact with the wall surface.
- Always ensure that the location where you are installing your appliance is free of stored items such as papers and other flammable materials.
- Never block the ventilation openings of the appliance, either on the inside or its exterior.

It is vital to keep your appliance well ventilated, so that there is proper air flow between the bottom of the unit and the plinth/kick plate which it is sitting on. See the ventilation instructions on page 24 of this manual.

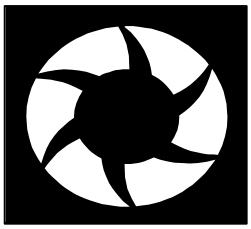

- Do not place electrical devices inside of the appliance, such as mixers and electric ice cream makers.

Service

You should not attempt to repair the appliance yourself, as this could cause injury or a more serious malfunction. If you require a service call then please contact the Customer Care Department.

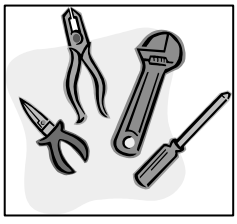

Specifications of your BRT200 fridge freezer

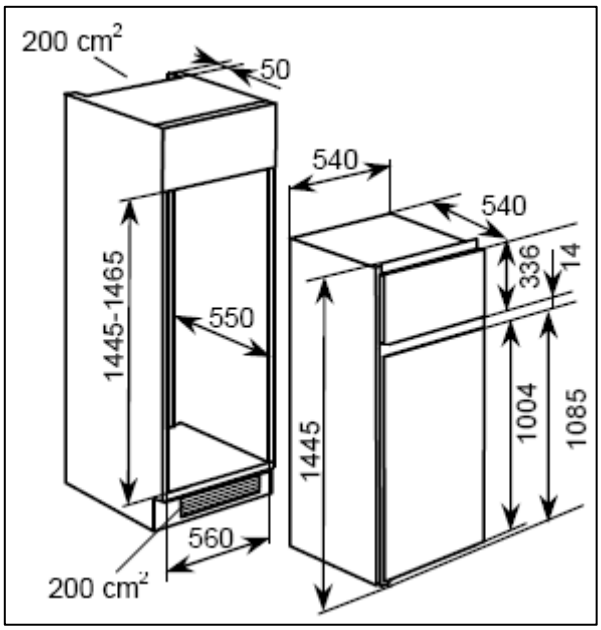

Dimensions of appliance

Height: 1445 mm
Width: 540 mm
Depth: 540 mm

Dimensions of aperture*

Height: 1445 mm -1465 mm
Width: 560 mm
Depth: 550 mm

- Automatic defrost (fridge section only)
- Adjustable thermostat
- Bottle rack
- 3 General racks
- 4 Safety glass shelves
- 2 salad crispers
- 1 wire freezer shelf
- Reversible doors

- ***39 dB quiet operation***

Cubic capacities

- Gross capacity: 208 litres
- Net capacity (fridge/freezer): 164/38 litres
- Freezing capacity: 2 kg in a 24 hour period

Energy efficiency class

Energy class: A

* Please refer to the installation instructions for more specific information on the size of aperture that you will require.

IMPORTANT: *When you install your appliance it is important to bear in mind its climatic rating.*

In order to find out the climatic rating of your appliance, you should check the rating plate. The rating plate is located on the front left edge of the inside of the fridge compartment. You will need to open the door of your appliance to be able to find it.

The rating plate will indicate the ambient temperature range that your appliance will function correctly within.

Description of the appliance

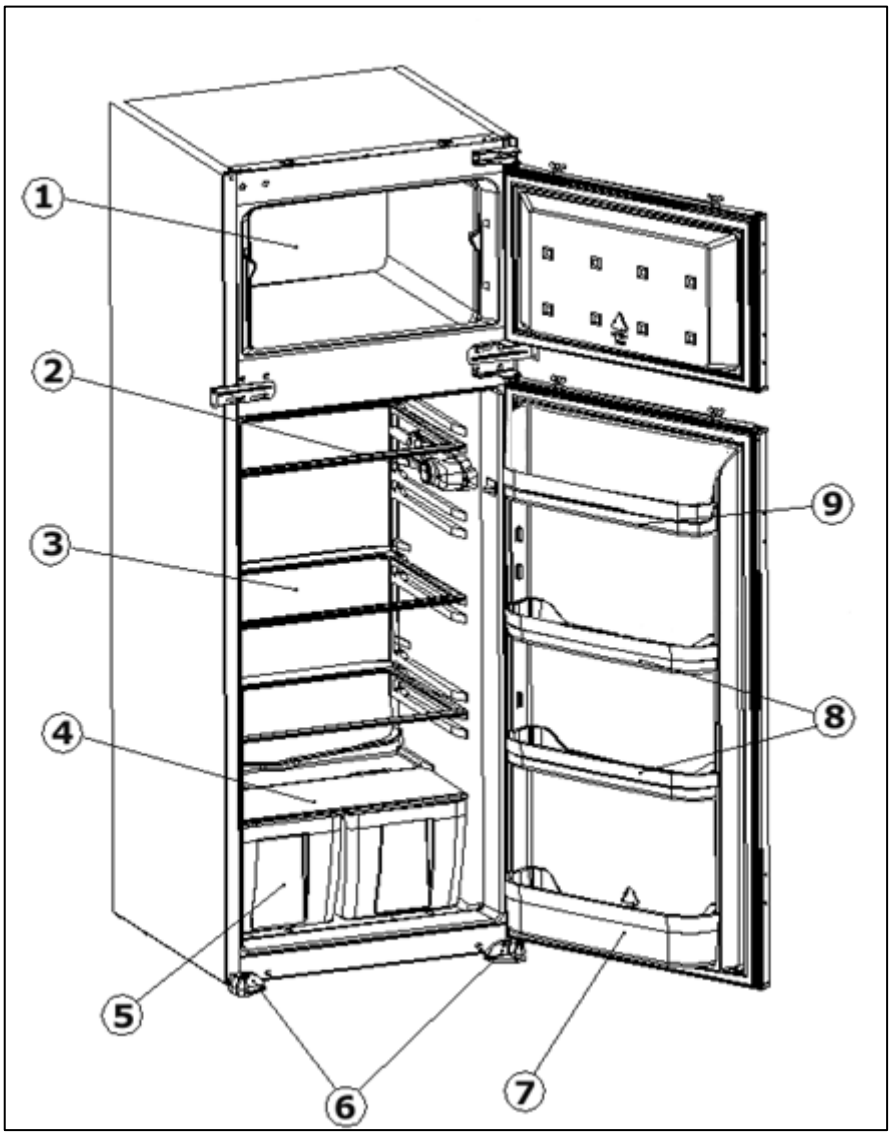

1) Freezer compartment
2) Adjustable thermostat
3) Safety glass shelf (x 3)
4) Salad crisper cover
5) Salad crisper (x 2)
6) Hinge receivers
7) Bottle shelf
8) Middle door shelf (x 2)
9) Upper door shelf

Description of the product features

1) Safety glass shelves

- These shelves may be placed in any of the guide slots within the interior of the appliance. They are protected from sliding out.

- To remove a shelf: Take off all of the items that are stored on the shelf that you want to remove. Then lift the back of the shelf from the underneath and carefully pull it out of the grooves.

2) Defrost water outlet

- The interior of the refrigerator is cooled by the cooling plate that is on the rear wall. Beneath this there is a channel and an outlet for the defrost water.

- It is important that this channel never becomes clogged (see "The defrost drain hole" section for a detailed explanation of how to keep the channel clear).

3) Salad crisper drawers and cover

- The crisper drawers are in the bottom of your refrigerator and there is a cover that goes over them.

- The cover helps to prevent fruit and vegetables from drying out prematurely.

4) Upper and middle door shelves

- The door liner holds various shelves, which are suitable for storing eggs, cheese, butter and yogurt. As well as smaller packages, tubes, cans etc.

5) Bottle shelf

- The lower shelf should be used for storing reasonably sized bottles.

- ***IMPORTANT: IT IS IMPORTANT THAT NONE OF THE SHELVES THAT SIT IN THE DOOR ARE OVERLOADED, AS THIS WILL DRASTICALLY REDUCE THEIR WORKING LIFE.***

6) Freezer compartment

- A freezer section, with a net capacity of 38 litres.

Using your Baumatic fridge freezer

Before switching on

- Make sure that it has been installed by a suitably qualified person, as per the information contained in Baumatic's installation instructions.

- After delivery, wait for eight hours before connecting the appliance to your mains supply. This will allow any oil from the compressor that may have been disturbed during the transportation process to settle.

- The outside of the appliance and the removable accessories contained within it, should be cleaned with a solution of liquid detergent and water.

- The interior of the appliance should be cleaned with a solution of sodium bicarbonate dissolved in lukewarm water. The interior and accessories should be thoroughly dried, after the cleaning process has been completed.

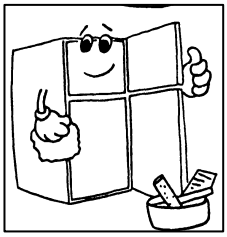

- There can be an odour when you first switch on the appliance. It will lessen as the appliance starts to cool.

During first use

- You should set the thermostat dial to its maximum setting for 24 hours after switching on the appliance for the first time.

- ***IMPORTANT: The thermostat dial must not be left on maximum setting for a prolonged period, as this may cause over freezing in the refrigerator compartment.***

- When you first switch on the appliance, the compressor will run continuously for approximately 24 hours or until the fridge freezer reaches a cool enough temperature.

- During this period of time, you should try not to open the door frequently or place a large amount of food within the appliance.

- You should then adjust the thermostat dial to its normal operating position.

- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the appliance on the thermostat or connecting it to your mains supply.

Switching on the appliance and setting the thermostat

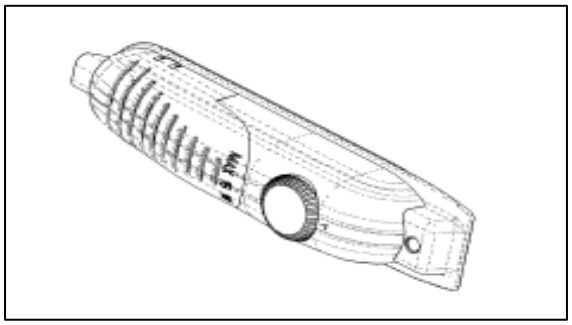

You switch on your appliance by connecting it to your mains supply and setting the thermostat. The thermostat is located inside the refrigerator compartment.

- The thermostat automatically regulates the temperature inside the fridge freezer, depending on what number you have turned the thermostat control knob to.

- Position <0> means that the appliance will not cool. However the light will still function.

- Position <1> will give you a higher temperature inside the fridge and freezer compartments.

- Position <7> will give you very low temperatures inside the fridge and freezer compartments.

- Ideally the thermostat should be set between positions <3> - <4> and should be adjusted to your personal requirements.

- The fridge section can maintain a temperature of between 4 – 6 degrees centigrade, depending on what thermostat settings you have selected.

- As this is a 4 star rated freezer, the temperature in this compartment should be maintained around -18°C and below.

- ***IMPORTANT:*** *The following things will affect the temperatures within the compartments:-*
  - Ambient temperature of the room.
  - The temperature of food.
  - The amount of food placed inside.
  - The number of door openings.

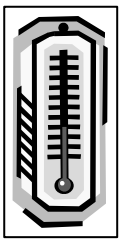

- On the maximum setting (position <7>), your fridge freezer will run for longer periods of time and will therefore maintain a lower temperature. There is no need to run your appliance on setting <7>, unless you are freezing fresh food.

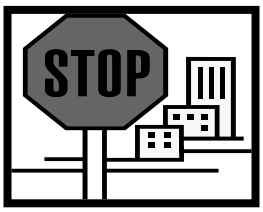

IMPORTANT: If you run the appliance with the thermostat dial on a higher setting (over <5>) for prolonged periods, there is the possibility of excessive ice build up on the back wall of the refrigerator compartment. Due to this excessive ice build up, the temperature within this compartment will rise. If this occurs, kindly defrost the appliance and reset the thermostat knob to a lower position.

Arranging and storing food in the fridge section

- Warm food or evaporating liquids should not be stored in your refrigerator, as this will increase the humidity inside of the appliance.

- All foods should be wrapped or covered, this is particularly important if the food has a strong flavour. You should use polythene bags or sheets, aluminium foil, wax paper. Liquids should be stored in covered containers or bottles.

- To maximise the space inside of the fridge section, any excessive packaging on the food should be removed.

- Quickly perishable food should be stored at the back of the refrigerator, which is the coldest part of the appliance.

- No food items should be allowed to come into contact with the back wall of the refrigerator.

- Make sure that you arrange food in such a way that the door can close completely. Particular attention should be given to bottles that may protrude when placed on shelves inside the main section of the refrigerator.

- Some organic solutions, such as the oils in lemon/orange peel and acid in butter, can cause damage to the plastic parts contained inside of the refrigerator.

- Do not open the refrigerator door too often or leave the door open for long periods of time, as this will increase the temperature inside of the appliance.

- ***Meat*** should be wrapped in polythene bags and then placed on the glass shelf above the salad drawers.

  (Meat should only be stored in this manner for one or two days at the most).

- ***Cold dishes/cooked food*** should be covered and can be placed on any shelf.

- ***Fruit and vegetables*** should be cleaned thoroughly and placed in the salad drawers.

- ***Cheese and butter*** should be placed in airtight containers, or they can be wrapped in aluminium foil or polythene bags. As much air as possible should be removed from the bags.

- ***Milk bottles*** should have a cap on them and be stored on the bottle shelf that sits in the door.

- ***Garlic, potatoes, onions and bananas should only be stored in a refrigerator IF they are stored in airtight containers.***

The freezer compartment

The freezer compartment is suitable for storing and freezing food.

- The freezer compartment temperature must have already reached -18 degrees centigrade (or lower) before you attempt to store food that is already frozen or freezing fresh food.

- The freezer compartment is only able to freeze a certain quantity of food at one time. The maximum amount of fresh food that can be frozen within a 24 hour period is 2 kg. You should not attempt to freeze more than this amount of fresh food within a 24 hour period.

- Warm food should be allowed to cool down before you attempt to freeze it. If you place warm food in the freezer compartment, then the increased humidity will cause quicker ice formation and increase the amount of power that the appliance uses.

- The guidance of the food manufacturer should be followed, in regard to the maximum storage time.

- Thawed foods must not be frozen for a second time.

Freezing fresh food

- To freeze the maximum quantity of fresh food specified on the rating plate, you should turn the thermostat dial to position <7>, a few hours prior to attempting freezing.
- For smaller quantities of fresh food, you should turn the thermostat dial to position <7>, 1 hour prior to freezing.

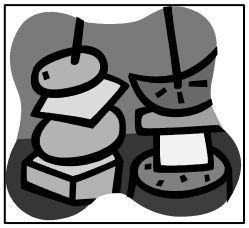

- Fresh food should be packed into airtight containers or packaging. This will help to make sure that the food doesn't dry out or lose its flavour. It will also ensure that flavour does not transfer from other foods.

- After 24 hours you should check that the fresh food is satisfactorily frozen. If it is then the thermostat dial should be turned back to it's normal operating position

- ***IMPORTANT:*** *If you run the appliance with the thermostat dial on a higher setting (over <5>) for prolonged periods, the defrost drain hole will freeze. It may also cause the appliance to overwork and the fridge and freezer compartments to freeze over.*

Tips on freezing

- Freezer bags, polythene wraps, aluminium foil (extra thick) and special cans for frozen foods are suitable packaging for storing frozen goods in.
- Tape, rubber bands or plastic clips are suitable for sealing bags and wrappings.

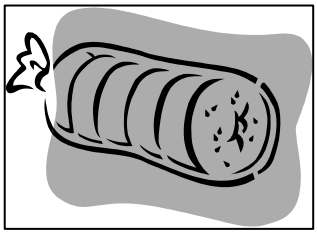

- Before sealing a suitable bag, you should compress the air out of it, as this will help the food to freeze more easily.
- Flat packages freeze more easily.
- If you are freezing liquid, then do not fill the container to the brim. Liquids will expand when being frozen.

- ***Do not place bottles (glass or tin) containing liquids (especially sparkling liquids) into the freezer as they could cause the bottle to burst during freezing.***

Making ice cubes

- Fill an ice cube tray with water and place it in the freezer compartment.

- After the water is completely frozen and turned to ice, you can twist the ice cube tray (as shown in the drawing below) to dispense the ice.

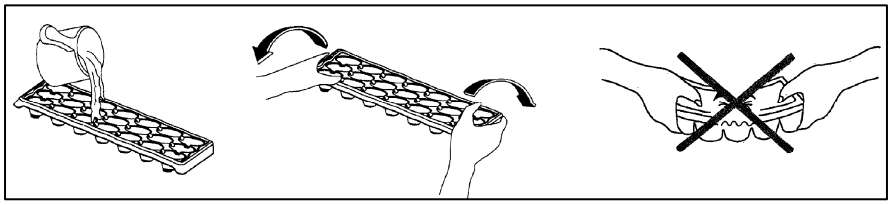

Cleaning and maintenance

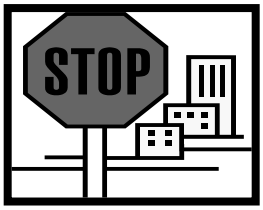

WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO CLEAN IT.

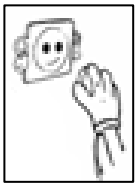

- Do not clean the appliance by pouring water onto it or spraying water over it.

- The refrigerator and freezer compartment should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.

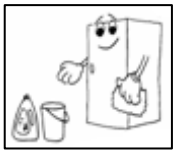

- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.

- Do not use abrasive products, detergents or soaps.

- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.

- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.

The defrost drain hole

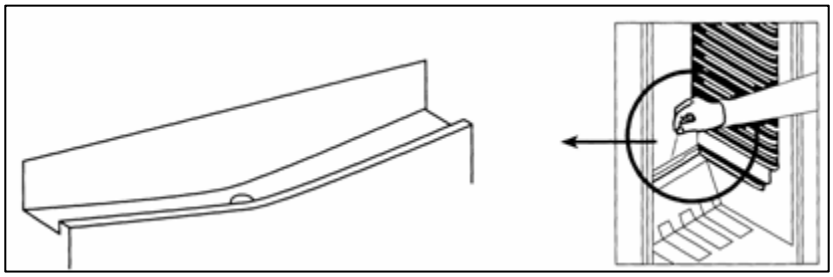

- Defrosting occurs automatically in the refrigerator compartment during operation. The defrost water is collected by the evaporating tray and evaporates automatically.

- The drain hole should be cleaned periodically with a drain hole cleaner. This will prevent water from collecting in the bottom of the refrigerator, instead of flowing down the defrost drainage channel and drain hole.

- ***IMPORTANT:*** *Please note that a drain hole cleaner should not be left in position permanently. Otherwise this may prevent the defrost water from entering the drain hole.*

- You can also pour a small amount of water down the drain hole to clean the defrost drainage channel.

- You should be careful to make sure that food packages do not touch the rear wall of the appliance, as this can interrupt the automatic defrosting process and deflect water into the base of your refrigerator.

- Use a solution of bicarbonate of soda and lukewarm water to clean the evaporating tray.

- ***IMPORTANT:*** *It is normal to get some ice droplets forming on the back wall of the appliance. The formation of ice droplets does not indicate an appliance fault.*

Defrosting the freezer compartment

- The frost in the freezer compartment should be removed periodically. You can use a plastic scraper to keep down the amount of frost that builds.

- ***IMPORTANT:*** *The freezer compartment should be defrosted at least twice a year. The number of times that you need to defrost it, will depend on the setting of your thermostat and how much food you freeze and store in the compartment.*

- The day before you defrost, the thermostat dial to position <7>, this will make sure that the food contained in the compartment is frozen properly.

- Whilst defrosting the appliance, the food should be removed from the compartment and wrapped in several layers of paper and stored in a cool place. The foods rise in temperature will shorten its storage life and therefore the food should be used within a relatively short period of time.

- ***DO NOT PLACE FOOD BACK IN THE FREEZER COMPARTMENT THAT HAS STARTED TO THAW.***

- Set the thermostat knob to position <0> and disconnect the appliance from your mains supply.

- Leave the door to the freezer compartment open. You can place a bowl of warm water inside the freezer compartment to speed up the defrost process.

- Once all the ice that has built up has melted, then the inside of the freezer compartment should be dried thoroughly. Failure to do this will result in immediate ice build when the appliance is turned back on.

- With dry hands, reconnect your appliance to your mains supply. Set the thermostat knob to position <7> for a 24 hour period, before returning it to the normal setting of between <3> - <4>.

- You should not attempt to freeze fresh food inside the freezer compartment until this 24 hour time period has elapsed.

- ***Do not defrost the appliance with other electrical devices (e.g. hair dryer). Do not use sharp metal objects to remove the ice on the freezer, as this could cause damage to the refrigerant system.***

Replacing the light bulb

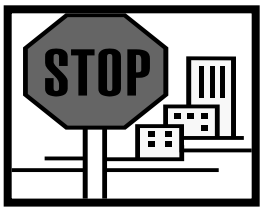

WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO REPLACE THE LIGHT BULB.

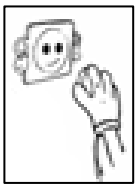

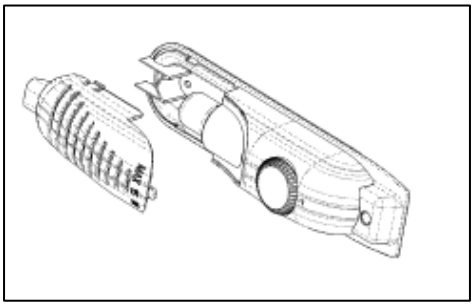

- There is an interior light on the right hand side of the refrigerator section (next to the thermostat dial).
- Press the hooks on the sides of the light cover and slide the cover off.
- Change the present light bulb with a new one. The replacement bulb should not have a greater rating than 15 W.
- Replace the light cover and after waiting five minutes, reconnect your plug to your mains supply.

Installation

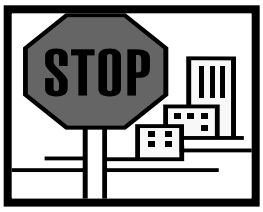

IMPORTANT: Before installation and usage read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found on the front left edge of the inside of the refrigerator.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

Electrical connection

YOUR FRIDGE FREEZER IS INTENDED FOR FITTED AND PERMANENT INSTALLATION.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

- Your refrigerator comes supplied with a 13 amp plug fitted. If in future you need to change the fuse in this plug, then a 13 amp ASTA approved (BS 1362) fuse **must** be used.

- The wiring in the mains lead is coloured as follows:

Brown	Live
Blue	Neutral
Green and yellow	Earth

- As the colours of the wires in the appliance's mains lead may not correspond with the coloured markings identifying the terminals in your spur box, please proceed as follows:

  The ***brown wire*** must be connected to the terminal marked "L" (live), or coloured ***red***.

  The ***blue wire*** must be connected to the terminal marked "N" (neutral), or coloured ***black***.

  The ***green and yellow wire*** must be connected to the terminal marked "E" (earth), or by the earth symbol, or coloured ***green and yellow***.

- When the connection is completed, no stray strands or cut wire should be present. The cord clamp must be secured over the outer sheath.

Positioning

- It is advisable that your appliance is only installed in a location where the ambient temperature of the room, corresponds with the climate classification that is stated on the rating plate of your appliance. Your appliance may not function correctly if the ambient temperature falls outside of the following ranges.

Climate classification	Appropriate ambient temperature
SN	+10 to +32 degrees centigrade
N	+16 to +32 degrees centigrade

- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler).

- The door should be able to open completely and freely.

- The appliance should be situated so you can easily access the food that is stored in it.

- You should check whether there is an electrical socket available, which will be accessible after your appliance is installed.

Reversing the doors of your appliance

The doors of your fridge freezer can be set to open from the left or the right. If you want the doors to be hinged on the left hand side and opening from the right hand side, you will need to follow the door reversal process.

IMPORTANT: If required, the doors should be reversed PRIOR to installing the appliance into the housing unit.

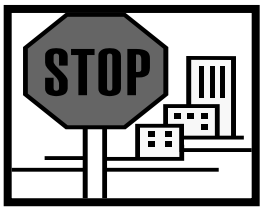

Caution! After unscrewing any of the fixing hinges, hold the door to prevent it from falling and causing damage.

Any parts that you remove from the appliance whilst reversing the door, should be retained for later use.

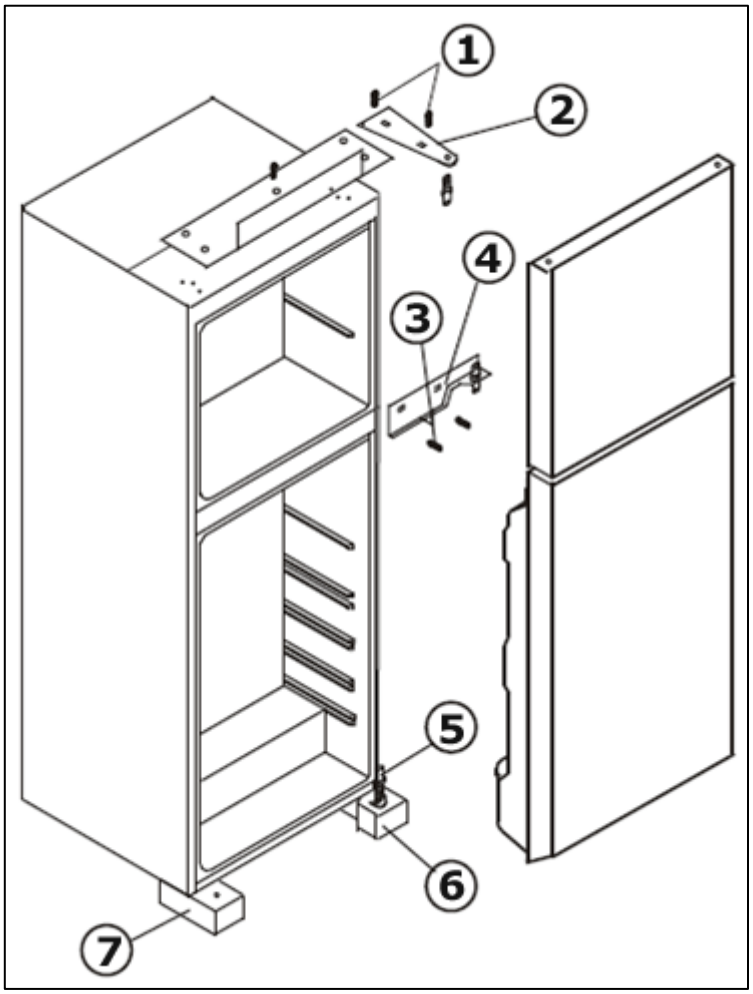

1) Top hinge screws
2) Top hinge
3) Middle hinge screws
4) Middle hinge
5) Lower hinge pin
6) Right lower hinge receiver
7) Left lower hinge receiver

- Remove both of the top hinge screws **(1)** that hold the top hinge **(2)** in place and then remove the top hinge.

- Remove the freezer door by lifting it upwards and away from the middle hinge pin.

- Place the door on a cushioned surface, so that it does not get damaged.

- Remove both of the middle hinge screws **(3)** that hold the middle hinge **(4)** in place and then remove the middle hinge.

- Remove the fridge door by lifting it upwards and away from the lower hinge pin **(5)**.

- Place the door on a cushioned surface, so that it does not get damaged.

- Remove the lower hinge pin **(5)** from the right lower hinge receiver **(6)** and insert it into the left lower hinge receiver **(7)**.

- Place the fridge door back onto the lower hinge pin **(5)**. It must remain closed until the door reversal process is completed.

- Turn the middle hinge **(4)** through 180 degrees from its original position and then fix it to the left hand side of the cabinet using the middle hinge screws **(3)**. These screws must be fully tightened.

- Place the freezer door back onto the middle hinge pin. It must remain closed until the door reversal process is completed.

- Turn the top hinge **(2)** through 180 degrees from its original position. Remove the hinge pin and insert it, so that it is still facing downwards. Then fix the top hinge to the left hand side of the cabinet using the top hinge screws **(1)**. These screws must be fully tightened.

IMPORTANT: Check that both the upper and lower doors open and shut correctly, without fouling, after you have completed the door reversal process.

After the door has been reversed, you should check the door seal of the fridge and freezer door. Neither seal should be creased or crushed; otherwise there will be a gap between it and the inside of the door.

- The seal must adhere properly all the way around the door.

- If either seal is not adhering to the cabinet properly, then you should either:-

  1. Use a warm damp cloth and manipulate the seal until it does adhere to the cabinet properly, all the way around the door.

     or

  2. Use a hair dryer on its lowest heat setting and lightly heat the areas of the door seal that are not adhering correctly. The heat will make the seal more pliable and this will allow you to manipulate the seal into the correct position.

IMPORTANT: AVOID HEATING THE DOOR SEAL ON HIGH HEAT SETTINGS OR FOR PROLONGED PERIODS, WHICH MAY DAMAGE THE DOOR SEAL. PRECAUTIONS SHOULD BE TAKEN WHEN USING A HAIR DRYER. ANY DAMAGE CAUSED TO THE APPLIANCE WILL NOT BE COVERED UNDER THE GUARANTEE TERMS AND CONDITIONS.

Aperture dimensions and ventilation requirements

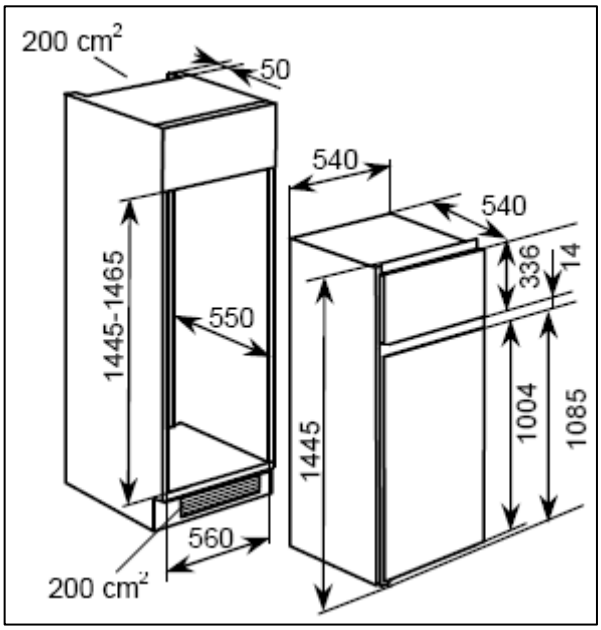

1) The appliance aperture should be:

Height- 1445 - 1465 mm
Depth- 550 mm
Width- 560 mm

The height of the aperture needs to be between 1445 - 1465 mm.

- If required use filler shelves to occupy any additional space that you have in the aperture (as shown in the picture opposite).

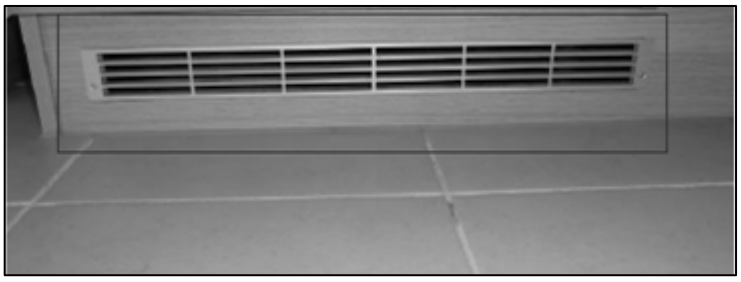

- ***IMPORTANT:*** *The appliance aperture MUST have a minimum of 200 cm² free air flow for ventilation. This ventilation is required for the appliance to work properly.*

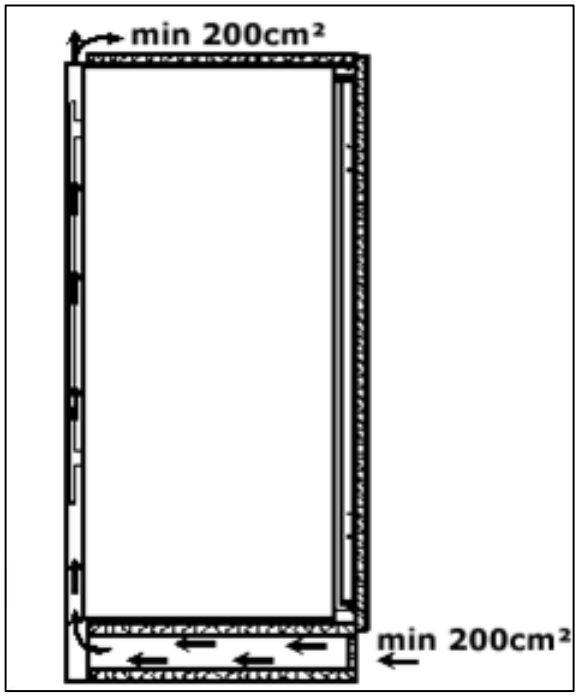

The amount of ventilation that is required is shown in the diagram above.

Installing your fridge freezer

a) Place the appliance into the housing unit. Position the appliance towards the left hand side wall, leaving a gap of approximately 5 mm.

- ***IMPORTANT:*** *If you have reversed the door of the appliance, then the 5 mm gap should be on the opposite side.*

b) Fix the appliance to the top shelf of the housing unit.

- ***IMPORTANT:*** *This will help to keep the appliance vertically parallel with the décor doors. If the housing unit has no top shelf, then we recommend that you install one before continuing with the rest of the installation.*

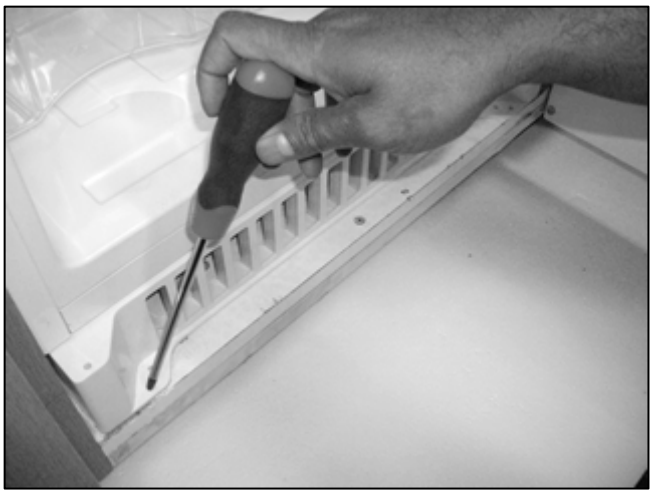

c) Fix the lower hinge receivers to the base of the housing unit (as shown in the picture opposite).

d) Once the appliance is in position, trim the filler gasket provided with the fixing kit to an appropriate size and then insert it into the 5 mm gap that you left in step **a)**.

e) Slide the left hand centre bracket towards the housing unit and then fix it to the side wall of the housing unit (as shown in the picture opposite).

f) Loosen the screws on the right hand middle hinge and then slide the right hand centre bracket towards the housing unit. Fix it to the side wall of the housing unit.

g) Fix the slider guides onto the edge of the appliance doors (there are 2 slider guides per door).

- Insert the sliders into the slider guides (as shown in the picture opposite).

- With the door open at a 90° angle, mark the distance from the front edge of the furniture door towards the edge of the slider. This measurement should be approximately 20 mm.

- Fix the sliders into position and fully tighten the screws.

h) Check that both the furniture doors open and close properly, without fouling on the kitchen cabinet.

- Ensure that the doors of the appliance and the door seals are shutting properly against the cabinet of the fridge freezer.

- Installation completed.

Troubleshooting

IMPORTANT: If your fridge freezer appears not to be operating properly, before contacting the Baumatic Customer Care Department, please refer to the checklist on the next page.

My fridge freezer does not appear to be working/there is no power to my appliance.

- Check that the plug is fully inserted into the power socket.
- Check that there is power to your mains supply (e.g. that there hasn't been a power cut or that the fuse hasn't blown).
- Check that the thermostat has not been turned to the off position.
- Check that your mains supply voltage, corresponds to the voltage stated on the rating plate of your appliance.

My fridge freezer appears to be performing poorly.

- Check that the appliance isn't overloaded and that food hasn't been packed too tightly into it.
- The thermostat setting is too low; you should turn the thermostat up higher.
- Ensure that the door is closing properly and that the door has not been opened for a prolonged period in error.
- Ensure that there is adequate ventilation for your appliance.

My fridge freezer is noisy.

- The refrigerant gas that circulates the pipework of the appliance may make a slight noise, even if the compressor is not running.
- If the noise worsens or the appliance gets louder than normal; check that it is levelled off correctly, that nothing is touching the rear of the fridge freezer and that nothing placed inside the appliance is rattling.

Ice has formed on the inner back wall of my fridge.

- Check that food has not been pushed too far back inside the appliance, so that it is in contact with the inner back wall.

- ***IMPORTANT:*** *It is normal to get some ice droplets forming on the back wall of the appliance. The formation of ice droplets does not indicate an appliance fault.*

- If you get extreme ice build on the back wall of the fridge compartment, check that the thermostat has been set appropriately.

There is water in the base of the fridge or leaking out of my fridge.

- Follow the "The defrost drain hole" section on page 16.

IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact the Customer Care Department on telephone number (0118) 933 6911.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

The manufacturer has the right to change any specifications on the product without giving prior notice.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance.

IMPORTANT: Baumatic Ltd. operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.

United Kingdom
Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone
(0118) 933 6900
Sales Fax
(0118) 931 0035
Customer Care Telephone
(0118) 933 6911
Customer Care Fax
(0118) 986 9124
Spares Telephone
(01235) 437244
Advice Line Telephone
(0118) 933 6933

E-mail:
sales@baumatic.co.uk
customercare@baumatic.co.uk
spares@baumatic.co.uk
technical@baumatic.co.uk

Website:
www.baumatic.co.uk

Republic of Ireland
01- 6266 798

Czech Republic
Baumatic CR spol s.r.o.
Amperova 495
46215, Librec
Czech Republic

+420 800 185 263

www.baumatic.cz

Slovak Republic
Baumatic Slovakia, s.r.o.
Skultetyho 1
831 04 Bratislava 3
Slovakia

+421 255 640 618

Germany
Baumatic Gmbh
Janderstrasse 9
Mannheim, 68199
Germany

+4962 112 9190

www.baumatic.de

Italy
Baumatic Italia S.R.L.
Via Caltana 129
Campodarsego (Padova), 35011
Italy

+3904 9920 2297

www.baumatic.it

Holland
Baumatic Benelux B.V.
Grindzuigerstraat 22
1333 MS ALMERE
The Netherlands

+3136 549 1555

www.baumatic.nl

Baumatic

www.baumatic.com